


MT953, MT953R, MT957, MT957R

WASTE DISPOSER AIR SWITCH WITH FREEDOM MOUNT



INSTALLATION INSTRUCTIONS

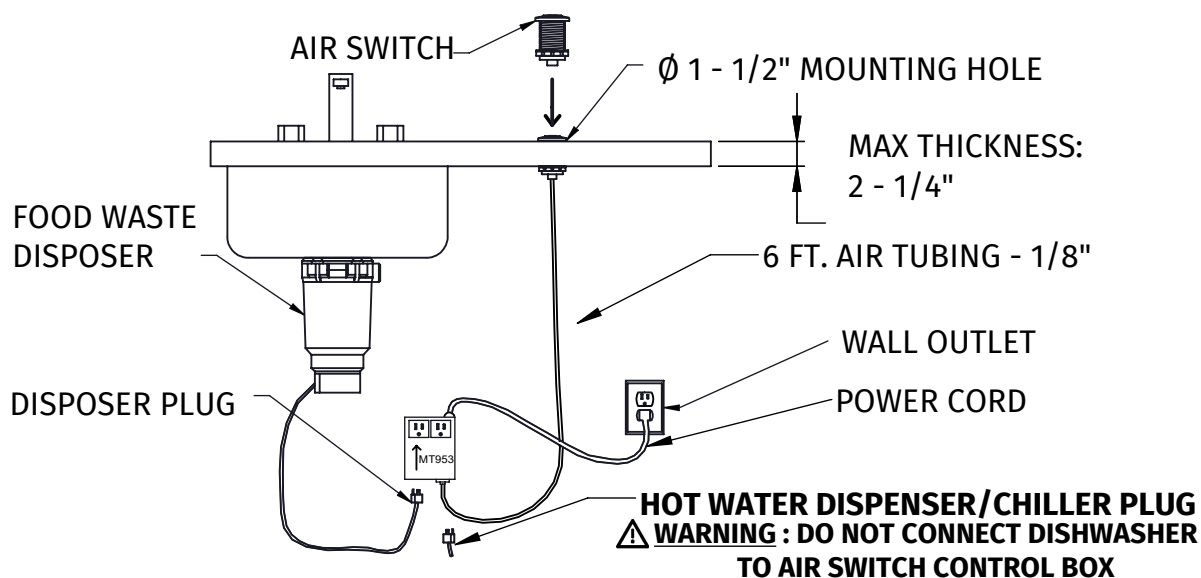

1. APPLY 100% SILICONE BENEATH THE FLANGE OF THE BUTTON AND INSTALL IN Ø 1 - 1/2" MOUNTING HOLE. THE METAL & RUBBER WASHERS SHOULD BE UNDER THE FLANGE, ABOVE THE COUNTER SURFACE.
2. INSTALL THE BOX AGAINST THE SIDE OF THE CABINET IN A POSITION THAT THE DISPOSER'S POWER CORD CAN REACH.
3. CUT THE AIR TUBING TO SIZE. ATTACH TO THE SWITCH AND TO THE MT953 BOX. ENSURE THAT THE HOSE IS NOT KINKED.
4. PLUG THE BOX INTO THE WALL OUTLET, THEN PLUG THE FOOD WASTE DISPOSER INTO EITHER OUTLET ON THE BOX. THE OTHER PLUG IS INTENDED FOR USE BY A HOT WATER DISPENSER OR CHILLER. **THIS 2ND OUTLET SHUTS OFF WHEN THE DISPOSER IS IN OPERATION, THUS A DISHWASHER SHOULD NOT BE CONNECTED.**

CAUTION: INSTALL ONLY AS SHOWN. DO NOT USE AN EXTENSION CORD. INSTALL UPRIGHT.

CONFORMS TO UL STD. 61010-1

VOLTAGE	120 V	CURRENT	15 A
POWER	1 HP	FREQUENCY	60 Hz

WARRANTY

FOR WARRANTY INFO PLEASE VISIT WWW.MOUNTAINPLUMBING.COM/WARRANTY-CLAIMS

FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB®, SCRUBBING BUBBLES® OR COMET® TO CLEAN. DO NOT USE BRILLO® OR SCOTCH BRITE® PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE GENTLY. STANDARD WINDEX® CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CARNAUBA WAX WITHOUT CLEANERS WILL HELP PROTECT THE FINISH.

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE