
MT1250XL

MOUNTAIN PURE® POINT OF USE CARBON FILTRATION SYSTEM - INSTALLATION SHEET

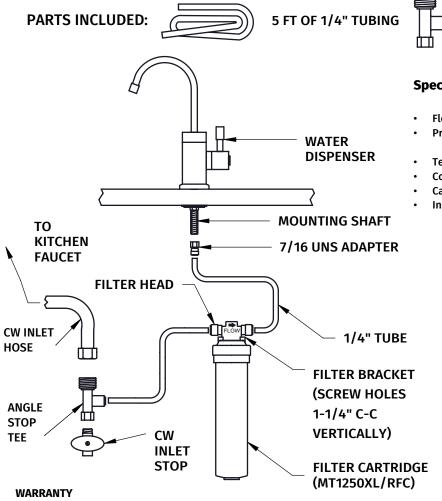

FOR WARRANTY INFO PLEASE VISIT WWW.MOUNTAINPLUMBING.COM/PAGE/RESOURCES/WARRANTY

AFTER USE. AN OCCASIONAL COAT OF PURE CARNAUBA WAX WITHOUT CLEANERS WILL HELP PORTECT THE FINISH.





Specifications:

- Flow Rate: 0.5 GPM (1.9 LPM)
- Pressure: 10-125 psi (0.7-8.6 bar) non-shock
- Temperature: 35-100 °F (2-38 °C)
- · Cold water use only
- Capacity: 1250 gal (4,732 L)
- Installation shall comply with applicable state and local regulations



Features & Benefits

System tested and Certified by NSF International against NSF/ANSI STandard 42 and 53 for the reduction of:

Standard No. 42 Aesthetic Effect

Chemical Reduction Taste & Odor

Chlorine Mechanical Filtration

Standard No. 53 Health Effects:

Chemical Reduction Lead

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB®, SCRUBBING BUBBLES® OR COMET® TO CLEAN. DO NOT USE BRILLO® OR SCOTCH BRITE® PADS. THESE WILL ALL HARM THE FINISH.

TO CLEAN. USE ONLY A DAMP SOFT CLOTH AND WIPE GENTLY. STANDARD WINDEX® CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS. TO MAINTAIN THE FINISH. WIPE WITH A SOFT DRY CLOTH

Mechanical Filtration
Cyst L5515-P

Installation Instructions

- 1. TURN OFF THE COLD WATER INLET STOP. OPEN COLD WATER SIDE OF KITCHEN FAUCET TO RELIEVE PRESSURE.
- 2. UNSCREW THE FAUCET COLD WATER INLET HOSE FROM STOP.
- 3. INSTALL THE MT1250XL FILTER SECURELY IN A LOCATION WHERE THE 1/4" TUBING CAN BE ATTACHED WITHOUT KINKING. MAKE SURE TO LEAVE AT LEAST 2" OF CLEARANCE BELOW

FILTER IN ORDER TO REMOVE DURING FILTER REPLACEMENT.

- 4. SCREW ON THE ANGLE STOP TEE TO THE COLD WATER INLET STOP. DO NOT CONNECT THIS FILTER TO THE HOT WATER SUPPLY!
- 5. MEASURE AND CUT THE 1/4" TUBE FROM THE ANGLE STOP TEE TO THE FILTER INLET.
- 6. PUSH THE 1/4" TUBE ALL THE WAY INTO THE ANGLE STOP TEE AND FILTER INLET.
- 7. SCREW ON THE 7/16 UNS ADAPTER TO THE WATER DISPENSER'S MOUNTING SHAFT.
- 8. MEASURE AND CUT THE 1/4" FROM THE FILTER OUTLET TO THE ADAPTER.
- 9. PUSH THE 1/4" TUBE ALL THE WAY INTO THE ADAPTER AND THE FILTER OUTLET.
- 10. VERIFY ALL HOSES ARE PUSHED IN ALL THE WAY. OPEN THE COLD WATER INLET STOP SLOWLY, ALLOWING THE SYSTEM TO PRESSURIZE.
- 11. OPEN THE WATER DISPENSER SLOWLY ALLOWING THE FILTER TO FILL COMPLETELY. CHECK FOR LEAKS.
- 12. RUN WATER FOR 5-10 MINS TO FLUSH AND PREPARE FILTER.

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE www.mountainplumbing.com 888-222-9140 fax 972-456-2719

MANUFACTURED BY OMNIPURE FILTER COMPANY, INC. 1904 INDUSTRIAL WAY. CALDWELL. ID 83605

FINISH CARE & MAINTENANCE