MT5060L-NL


TOILET SUPPLY KIT

SPECIFICATION SHEET

- -ONE LEAD FREE CUPC CERTIFIED MT631-NL 1/4 TURN BALL VALVE
- -1/2" COPPER SWEAT INLET
- -3/8" O.D. COMPRESSION OUTLET
- -ONE MT436X NO LEAD SUPPLY TUBE
- -OFFERED IN MANY STANDARD DECORATIVE FINISHES
- -SPECIAL FINISHES AVAILABLE UPON REQUEST





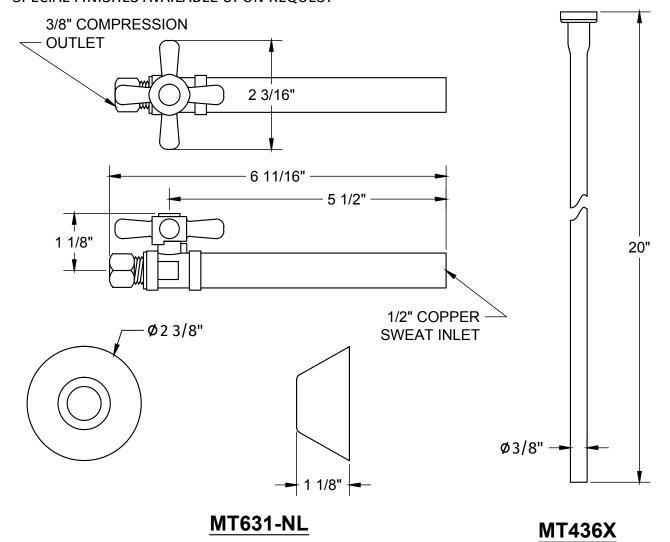

WARRANTY

FOR WARRANTY INFO PLEASE VISIT WWW.MOUNTAINPLUMBING.COM/PAGE/RESOURCES/WARRANTY

FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB®, SCRUBBING BUBBLES® OR COMET® TO CLEAN. DO NOT USE BRILLO® OR SCOTCH BRITE® PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE GENTLY. STANDARD WINDEX® CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CARNAUBA WAX WITHOUT CLEANERS WILL HELP PORTECT THE FINISH.