BDWOF-DS


ROUGH-IN & DRAIN FOR FREE-STANDING TUBS







SPECIFICATION SHEET

- SIMPLIFIES INSTALLATION OF FREE-STANDING TUBS
- INCLUDES SNAKEABLE EZ-CLICK™ TUB DRAIN
- COMPATIBLE WITH ALL MANUFACTURER'S TUBS WITH 2" DRAIN HOLE
- ASYMMETRIC MOUNTING PLATE ALLOWS FOR FLEXIBILITY WHEN INSTALLING IN CONSTRAINED SPACES
- ALLOWS FOR DRAIN TO BE REMOVED WITHOUT REMOVING THE TUB
- NO ACCESS PANEL REQUIRED
- INCLUDES 1 1/2" SOCKET ADAPTERS FOR BOTH PVC AND ABS SCH40 PIPE
- NOT FOR USE WITH LIQUID APPLIED OR SHEET MEMBRANES
- MUST BE INSTALLED IN A DRY AREA WITH NO POTENTIAL OF WATER CONTACT

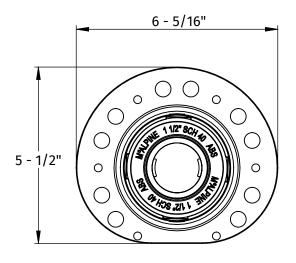

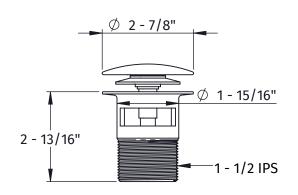

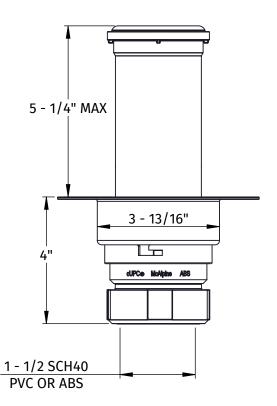

WARRANTY

FOR WARRANTY INFO PLEASE VISIT WWW.MOUNTAINPLUMBING.COM/WARRANTY-CLAIMS

FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB®, SCRUBBING BUBBLES® OR COMET® TO CLEAN. DO NOT USE BRILLO® OR SCOTCH BRITE® PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE GENTLY. STANDARD WINDEX® CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CARNAUBA WAX WITHOUT CLEANERS WILL HELP PORTECT THE FINISH.