



MT1900-NL HANDLE ASSEMBLY INSTRUCTIONS

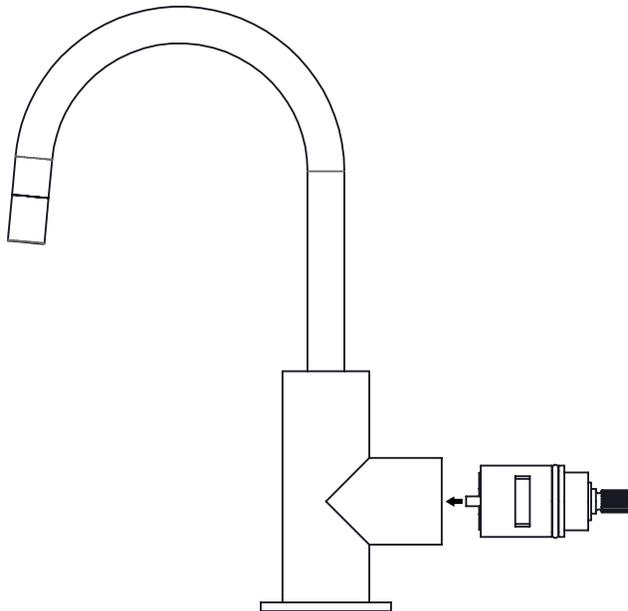

Recommended Tools Needed:

- 2 MM Hex Driver or Allen Wrench
- Vise-Grip Pliers
- 24 MM Socket and Torque Wrench
- Thread Locker

1. INSERT CARTRIDGE AND ROTATE UNTIL IT IS FULLY INSERTED AND UNABLE TO TWIST ANY FURTHER.

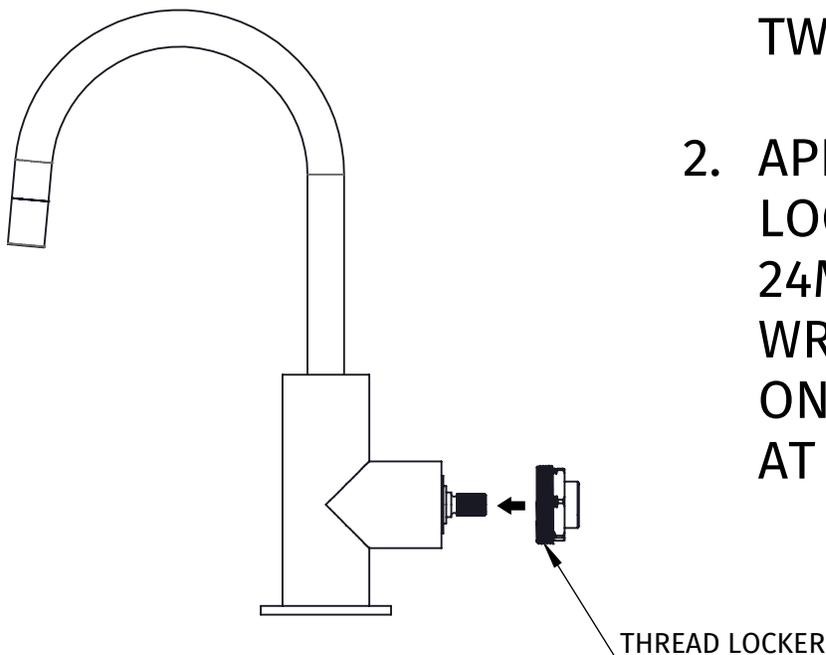

2. APPLY THREAD LOCKER AND USE 24MM SOCKET AND WRENCH TO TIGHTEN ON CARTRIDGE NUT AT 78 POUND*INCH.




WARRANTY

FOR WARRANTY INFO PLEASE VISIT WWW.MOUNTAINPLUMBING.COM/WARRANTY-CLAIMS

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE
www.mountainplumbing.com 888-222-9140 fax 972-456-2719

MT1900-NL HANDLE ASSEMBLY

INSTRUCTIONS

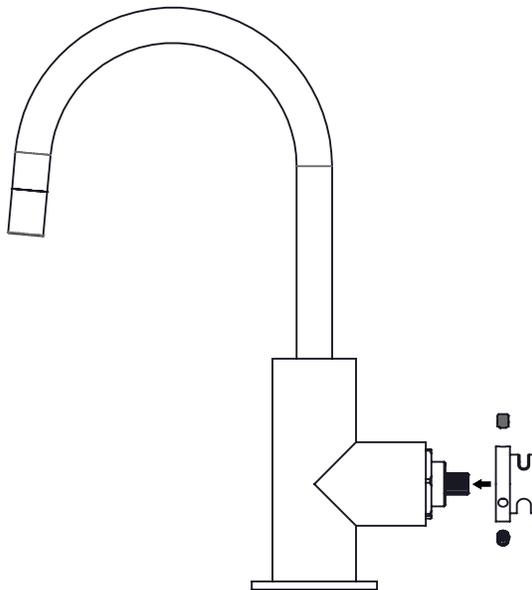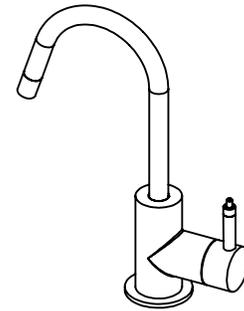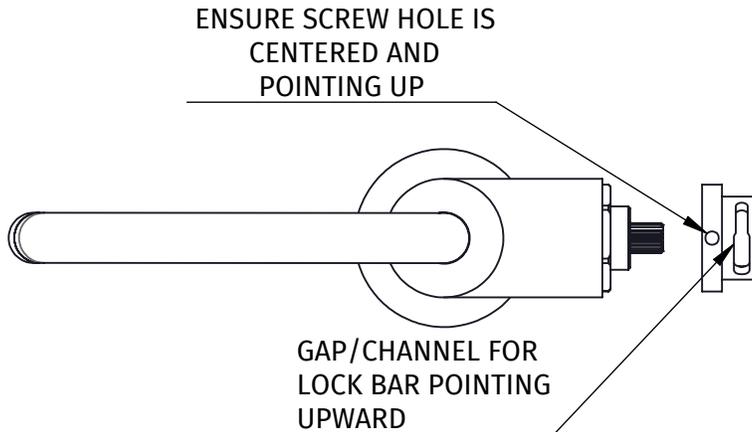



3. ALIGN THE LIMIT RING AT THE SAME POSITION SHOWN BEFORE ATTACHING TO CARTRIDGE NUT
4. ATTACH LIMIT RING AND SECURE WITH THREE SET SCREWS USING THE 2MM HEX DRIVER OR ALLEN WRENCH

WARRANTY


FOR WARRANTY INFO PLEASE VISIT WWW.MOUNTAINPLUMBING.COM/WARRANTY-CLAIMS

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

MT1900-NL HANDLE ASSEMBLY INSTRUCTIONS

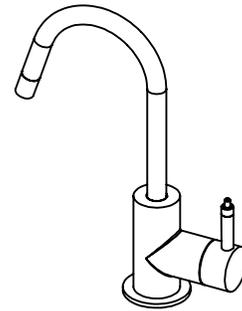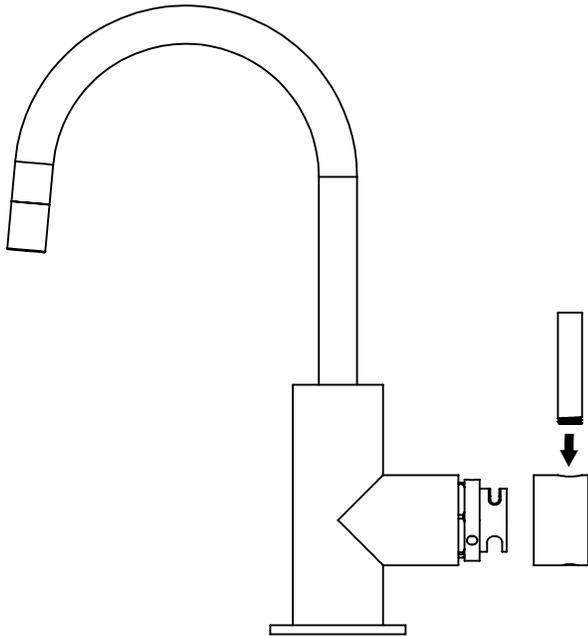

5. SCREW IN THE LEVER HANDLE TO THE HANDLE HUB


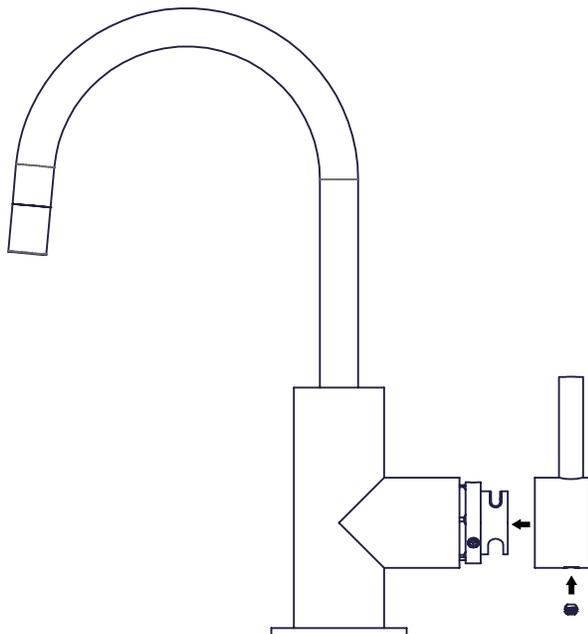


6. INSERT HANDLE HUB WITH LEVER POINTING UP VERTICALLY AND SECURE WITH SET SCREW FROM THE BOTTOM

WARRANTY


FOR WARRANTY INFO PLEASE VISIT WWW.MOUNTAINPLUMBING.COM/WARRANTY-CLAIMS

MT1900-NL HANDLE ASSEMBLY INSTRUCTIONS

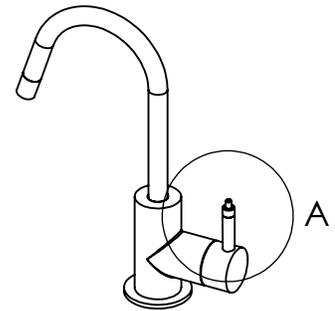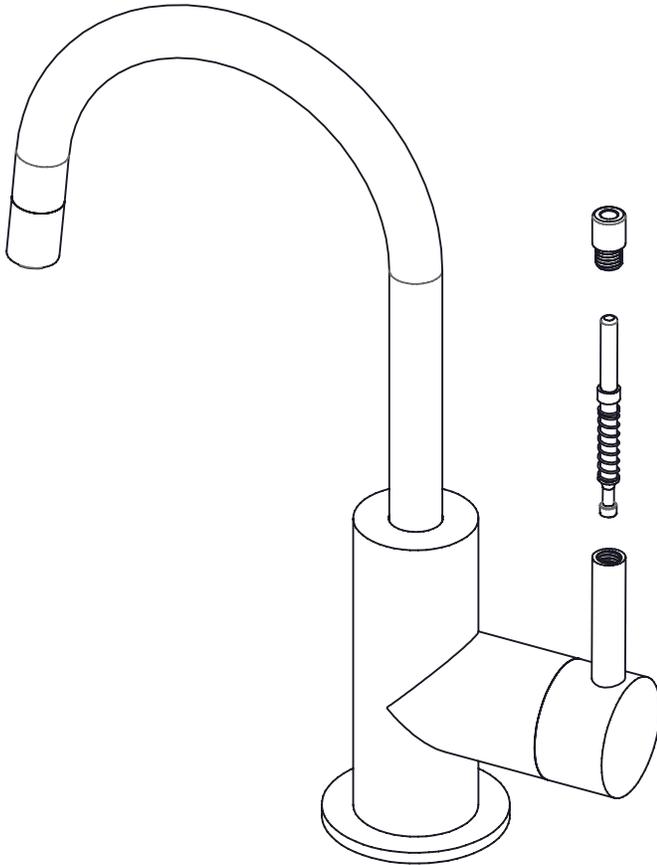

7. SLIDE SPRING ON
LOCK BAR AND
INSERT IN HANDLE
LEVER

8. SECURE THE
ASSEMBLY BY
SCREWING IN THE
LOCK COVER ON TO
THE HANDLE LEVER

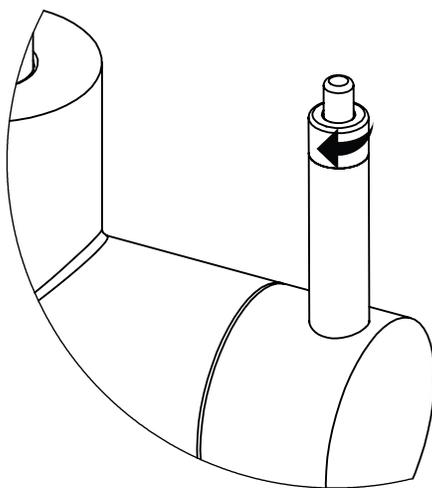

DETAIL A
SCALE 1 : 1

WARRANTY

FOR WARRANTY INFO PLEASE VISIT WWW.MOUNTAINPLUMBING.COM/WARRANTY-CLAIMS

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE
www.mountainplumbing.com 888-222-9140 fax 972-456-2719