

# MT3K-HF/RFC



## MOUNTAIN PURE® REPLACEMENT CARTRIDGE- INSTALLATION SHEET




A McAlpine Company

# Mountain


Plumbing Products

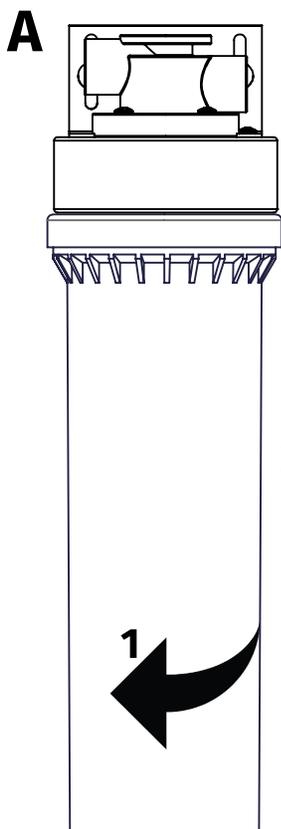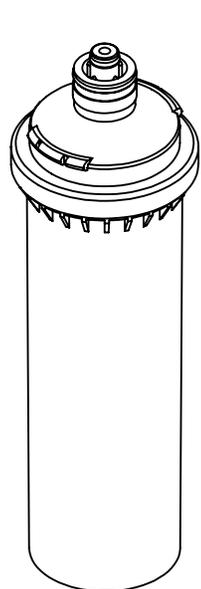

- 1A. TURN OFF WATER SUPPLY**  
**2A. ROTATE, BY HAND, CURRENT FILTER CARTRIDGE COUNTER-CLOCK WISE FULLY UNTIL IT STOPS**  
**3A. PULL DOWN FILTER TO DETACH FROM FILTER HEAD**

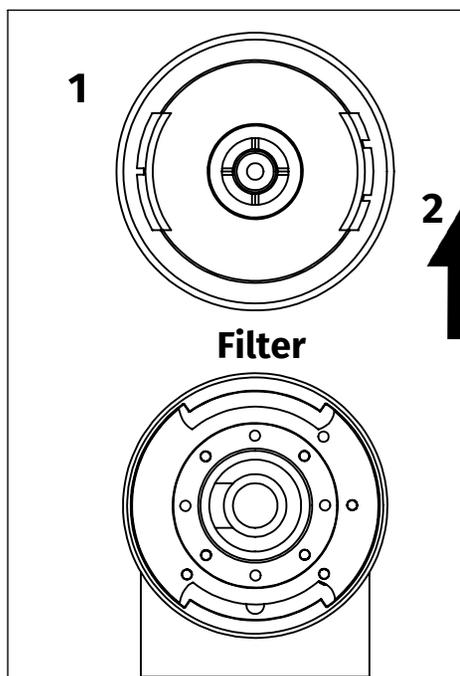

**Filter Head**

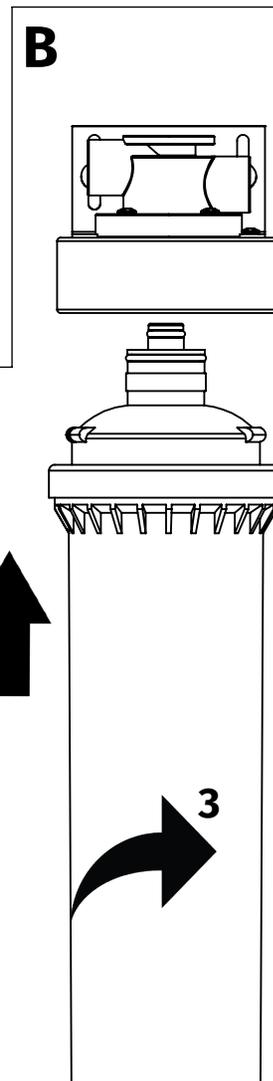

- 1B. ALIGN BOTH THE NEW CARTRIDGE AND HEAD TO ALLOW FULL INSERTION**  
**2B. INSERT NEW CARTRIDGE UNTIL FLUSH WITH HEAD**  
**3B. ROTATE NEW CARTRIDGE CLOCK WISE UNTIL IT STOPS.**  
**4B. TURN ON WATER AND CHECK FOR LEAKS**

### WARRANTY

FOR WARRANTY INFO PLEASE VISIT [WWW.MOUNTAINPLUMBING.COM/PAGE/RESOURCES/WARRANTY](http://WWW.MOUNTAINPLUMBING.COM/PAGE/RESOURCES/WARRANTY)