
MTVAC-BRKR


ATMOSPHERIC VACUUM BREAKER FOR HAND SHOWERS


SPECIFICATION SHEET

- INLINE BACKFLOW PREVENTION FOR HAND SHOWERS
- COMPLIES WITH ASSE 1014
- 1/2 NPSM INLET AND OUTLET
- IT IS NORMAL FOR THE VACUUM BREAKER TO EMIT A SMALL AMOUNT OF WATER AFTER CLOSING THE SHOWER VALVE.
- RECOMMENDED FOR INSTALLATION ON INLET SIDE OF HAND SHOWER HOSE
- CAUTION: NOT FOR INSTALLATION BEHIND WALLS. INSTALL AT LEAST 2 INCHES ABOVE FLOOD RIM OF TUB OR FIXTURE.

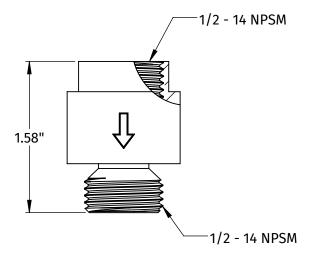



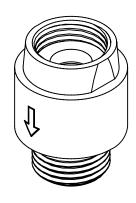

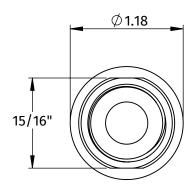

WARRANTY

FOR WARRANTY INFO PLEASE VISIT WWW.MOUNTAINPLUMBING.COM/PAGE/RESOURCES/WARRANTY

FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB®, SCRUBBING BUBBLES® OR COMET® TO CLEAN. DO NOT USE BRILLO® OR SCOTCH BRITE® PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE GENTLY. STANDARD WINDEX® CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CARNAUBA WAX WITHOUT CLEANERS WILL HELP PORTECT THE FINISH.