


MT250-B

CUP RINSER - STAINLESS STEEL BODY





Parts Provided

SS Base

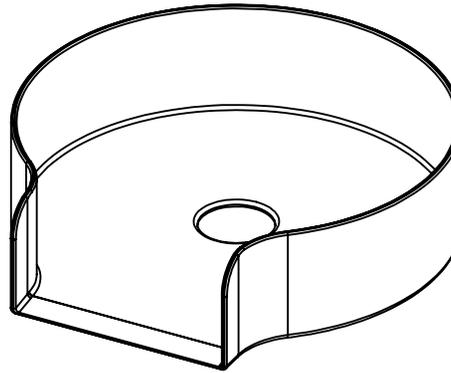


Webbed Taper

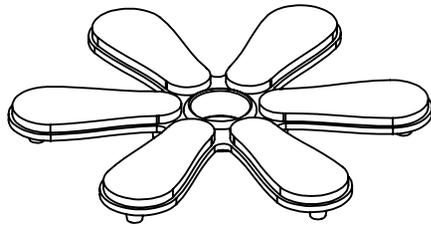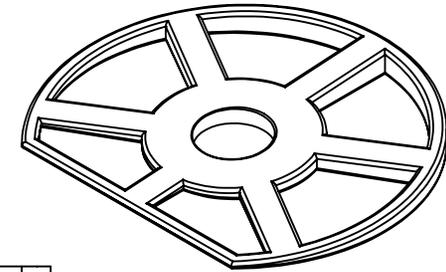

Petal




Flow Restrictor




Metal Washer




Gasket

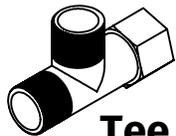

Tee Adapter



Securing Nut

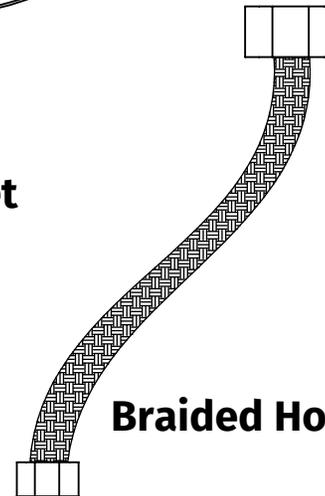

Braided Hose



Shank

WARRANTY

FOR WARRANTY INFO PLEASE VISIT WWW.MOUNTAINPLUMBING.COM/PAGE/RESOURCES/WARRANTY

FINISH CARE & MAINTENANCE


NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB®, SCRUBBING BUBBLES® OR COMET® TO CLEAN. DO NOT USE BRILLO® OR SCOTCH BRITE® PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE GENTLY. STANDARD WINDEX® CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CARNAUBA WAX WITHOUT CLEANERS WILL HELP PROTECT THE FINISH.

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

www.mountainplumbing.com 888-222-9140 fax 972-456-2719


MT250-B

CUP RINSER - STAINLESS STEEL BODY

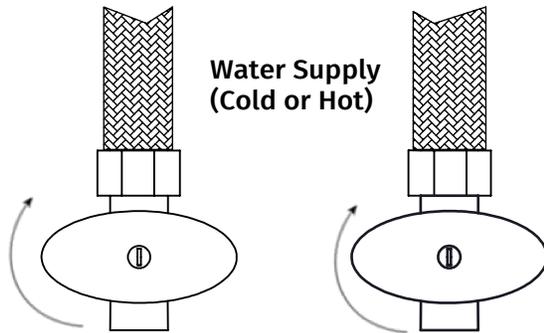

1.DECIDE WHETHER TO USE HOT OR COLD WATER FOR YOUR NEW CUP RINSER

2.TURN OFF BOTH HOT AND COLD WATER SUPPLIES UNDER THE SINK AND TURN WATER FAUCET ON AND OFF FOR CONFIRMATION THAT WATER SUPPLY IS OFF

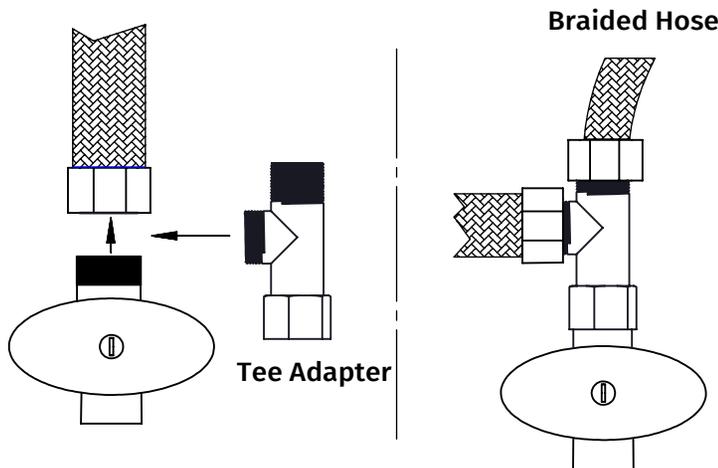

3.UNSCREW CURRENT SUPPLY CONNECTION HOSE AND SECURELY SCREW IN SUPPLIED TEE ADAPTER

4.SCREW IN SUPPLY HOSE TO TEE ADAPTER REMOVED IN LAST STEP

5.SCREW IN AND SECURE BRAIDED HOSE PROVIDED TO TEE ADAPTER

WARRANTY

FOR WARRANTY INFO PLEASE VISIT WWW.MOUNTAINPLUMBING.COM/PAGE/RESOURCES/WARRANTY


FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB®, SCRUBBING BUBBLES® OR COMET® TO CLEAN. DO NOT USE BRILLO® OR SCOTCH BRITE® PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE GENTLY. STANDARD WINDEX® CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CARNAUBA WAX WITHOUT CLEANERS WILL HELP PROTECT THE FINISH.

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE
www.mountainplumbing.com 888-222-9140 fax 972-456-2719

MT250-B


CUP RINSER - STAINLESS STEEL BODY

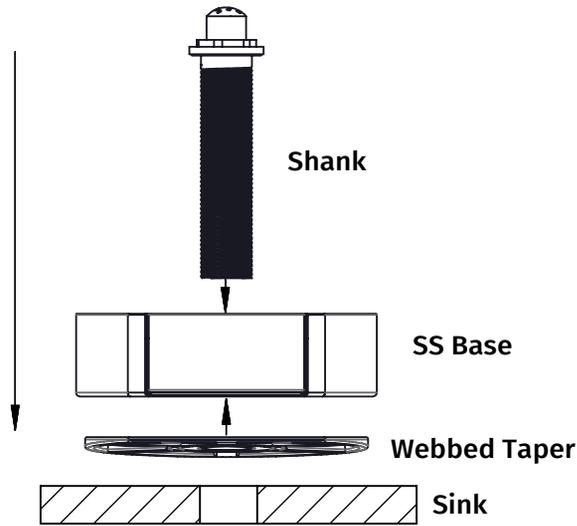

6.SLIDE SHANK THROUGH SS BASE AND WEBBED TAPER

7.SLIDE THIS ASSEMBLY THROUGH SINK HOLE

8.ONCE SHANK IS THROUGH SINK, SLIDE GASKET AND METAL WASHER THROUGH SHANK AND SECURE ASSEMBLY WITH SECURING NUT AND INSERT FLOW RESTRICTOR IN THE SHANK BEFORE PROCEEDING TO THE NEXT STEP

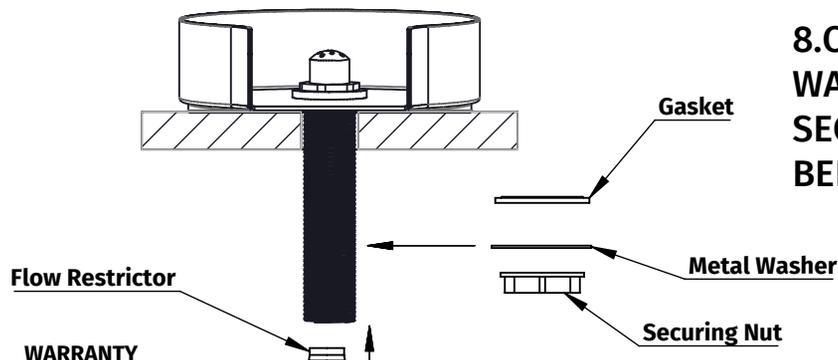

WARRANTY

FOR WARRANTY INFO PLEASE VISIT WWW.MOUNTAINPLUMBING.COM/PAGE/RESOURCES/WARRANTY


FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB®, SCRUBBING BUBBLES® OR COMET® TO CLEAN. DO NOT USE BRILLO® OR SCOTCH BRITE® PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE GENTLY. STANDARD WINDEX® CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CARNAUBA WAX WITHOUT CLEANERS WILL HELP PROTECT THE FINISH.

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE
www.mountainplumbing.com 888-222-9140 fax 972-456-2719

MT250-B

CUP RINSER - STAINLESS STEEL BODY

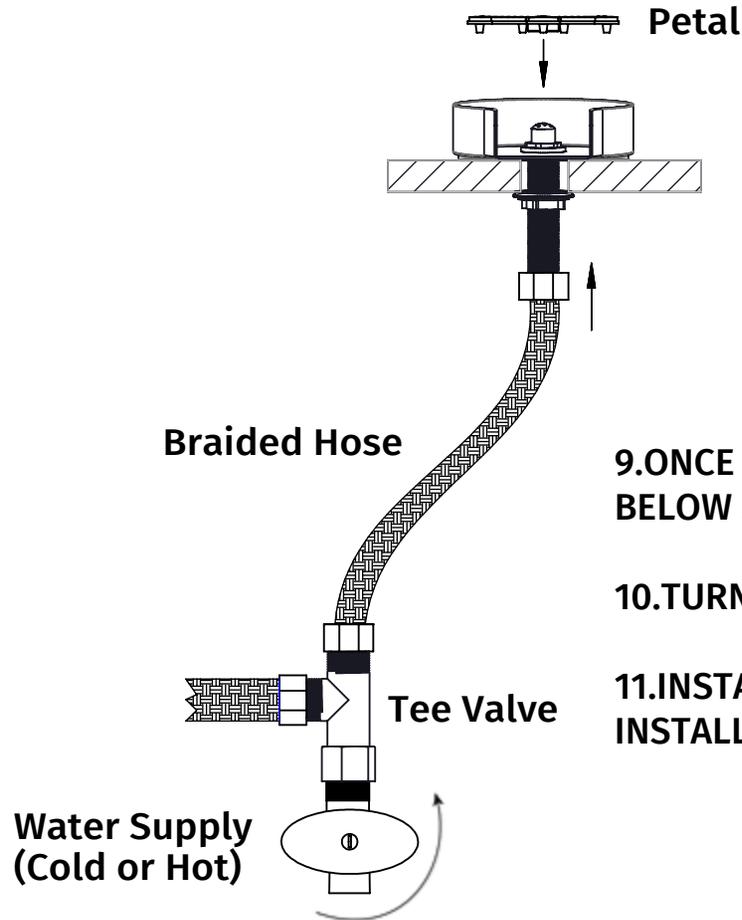

9. ONCE SECURED, SECURELY SCREW IN BRAIDED HOSE END TO SHANK BELOW SINK OVER THE FLOW RESTRICTOR INSERTED

10. TURN ON BOTH WATER SUPPLY VALVES AND CHECK FOR LEAKS

11. INSTALL PETAL ON SHANK NOZZLE AND TEST OUT TO FINISH INSTALLATION

WARRANTY

FOR WARRANTY INFO PLEASE VISIT WWW.MOUNTAINPLUMBING.COM/PAGE/RESOURCES/WARRANTY

FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB®, SCRUBBING BUBBLES® OR COMET® TO CLEAN. DO NOT USE BRILLO® OR SCOTCH BRITE® PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE GENTLY. STANDARD WINDEX® CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CARNAUBA WAX WITHOUT CLEANERS WILL HELP PROTECT THE FINISH.

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE
www.mountainplumbing.com 888-222-9140 fax 972-456-2719